

# Model F1FR/CCP Concealed **Quick Response** Sprinkler

# Bulletin 143 Rev.D

# **Features:**

- 1. Quick response performance.
- 2. Push on, thread off, sturdy convenient cover plate.
- 3. Factory assembled sprinkler and cup, shipped complete with protective cap.
- 4. Sprinkler assembly and cover plate separately packaged.
- 5. Two versions:
  - ½" (13mm) Adjustment.
    <sup>5</sup>/<sub>16</sub> (8mm) Adjustment.
- 6. Rugged damage resistant assembly. No exposed thermal element.
- Utilizes Model F1FR Pendent Sprinkler.
- 8. Aesthetic ceiling profile.
- 9. Available in white or other color painted or brass, chrome or black plated finishes.

# **Product Description**

The Reliable Model F1FR/CCP Quick Response Concealed Sprinkler is an attractive, low profile concealed sprinkler assembly. This sprinkler assembly utilizes a Model F1FR pendent sprinkler in a Model CCP cup and cover plate assembly. The cup is securely factory threaded on the sprinkler inlet end. The assembly is shipped with a protective cap. The sprinkler and cup are easily installed into the drop nipple using the Model RC1 Sprinkler Wrench. The cover plate assembly is attached to the sprinkler cup using a cover plate assembly with flexible tabs for threaded engagement. Simply push on the cover plate, then turn to adjust or remove the cover plate assembly.

The cover plate is attached to the skirt using 135°F (57°C) or 165°F (74°C) ordinary temperature classification solder. When the ceiling temperature rises, the solder holding the cover plate melts, allowing the release of this part and thus exposing the Model F1FR sprinkler inside to the rising ambient temperature.



The Model F1FR automatic sprinkler, utilizes a 3mm frangible glass bulb. This sprinkler has demonstrated response times in laboratory tests which are five to ten times faster than standard response sprinklers. This quick response enables the Model F1FR sprinkler to apply water to a fire much faster than standard sprinklers of the same temperature rating.

The glass bulb consists of an accurately controlled amount of special fluid hermetically sealed inside a precisely manufactured glass capsule. This glass bulb is specially constructed to provide fast thermal response. The other sprinkler parts are made of brass, copper and beryllium nickel.

At normal temperatures, the glass bulb contains the fluid in both the liquid phase and vapor phase. The vapor phase can be seen as a small bubble. As heat is applied the liquid expands, forcing the bubble smaller and smaller as the liquid pressure increases. Continued heating forces the liquid to push out against the bulb, causing the glass to shatter, opening the waterway and allowing the deflector to distribute water.

The temperature rating of the sprinkler is identified by the color of the glass bulb.

#### Application and Installation

The Model F1FR/ CCP Concealed Sprinkler uses the 1/2" orifice, 1/2" NPT (R1/2), 135°F (57°C), 155°F (68°C), 175°F (79°C) or 200°F (93°C) Model F1FR Pendent Sprinkler with a threaded Model CCP cup which is factory attached to the sprinkler. The assembly is completed by the installation of the attractive, low profile, 135°F (57°C) or 165°F (74°C) rated Model CCP push on cover plate assembly. The cover plate and sprinkler cup assemblies are joined using a cover plate skirt with flexible tabs for threaded engagement. A choice of two cover plate assemblies provide either 1/2" (13mm) or 5/16" (8mm) of cover adjustment.

Do not install these sprinklers in ceiling which have positive pressure in the space above.

After a  $2^{5/3}$  (67mm) diameter hole is cut in the ceiling, the sprinkler is easily installed with the Model RC1 Wrench. A Teflon\* based thread sealant should be applied to the sprinkler threads only. The Model RC1 Wrench is then used to engage the sprinkler wrenching surfaces and to install the sprinkler in the fitting. When inserting or removing the wrench from the sprinkler/cup assembly, care should be taken to prevent damage to the sprinkler. DO NOT WRENCH ON ANY OTHER PART OF THE SPRINKLER. The cover plate is then pushed onto the cup. Final adjustment is made by hand turning the cover plate until the skirt flange makes full contact with the ceiling. Cover plate removal requires turning in the counter clockwise direction.

After installation, inspect all sprinklers to ensure that there is a gap between the cover plate and ceiling and that the four cup slots are open and free from any air flow impediment to the space above.

Concealed cover plate/cup assemblies are listed only for use with specific sprinklers. The use of any other concealed cover plate/cup assembly with the Model F1FR Pendent Sprinkler or the use of the Model CCP Concealed cover plate assembly on any sprinkler with which it is not specifically listed my prevent good fire protection and will void all guarantees, warranties, listings and approvals.

\*DuPont Registered Trademark

#### Model F1FR Concealed Pendent Sprinkler

Cover Plate Finishes <sup>(1)</sup> Standard Finishes							
Chrome White							
Special Applications Finishes							
Bright Brass Satin Off-White Black Paint Black Plating							

<sup>(1)</sup> Other finishes and colors are available. Consult factory for details.

#### **Technical Data**

#### Maintenance

Model F1FR/CCP Concealed Sprinklers should be inspected quarterly and the sprinkler system maintained in accordance with NFPA 25. Do not clean sprinklers with soap and water, ammonia or any other cleaning fluids. Remove dust by using a soft brush or gentle vacuuming. Remove any sprinkler cover plate assembly which has been painted (other than factory applied) or damaged in any way. A stock of spare sprinklers should be maintained to allow quick replacement of damaged or operated sprinklers. Prior to installation, sprinklers should be maintained in the original cartons and packaging until used to minimize the potential for damage to sprinklers that would cause improper operation or non-operation.

#### **Approval Organizations**

- 1. Underwriters Laboratories, Inc.
- 2. Underwriters' Laboratories of Canada.
- 3. NYC MEA 258-93-E

#### ULI Listing Category

Sprinklers, Automatic and Open. Quick Response, Concealed

#### Ordering Information

Specify

- 1. Sprinkler Model F1FR
- 1/2" (13mm) orifice, 1/2" NPT (R1/2)
- 2. Sprinkler Temp. Rating:
- 135°F (56°C), 155°F (68°C), 175°F (79°C), 200°F (93°C) 3. Cover Plate Model: CCP
- 4. Cover Plate Thread size: 1/2" NPT (R1/2)
- 5. Cover Plate Temp. rating:135°F (56°C) for 135°F (56°C) and 155°F (68°C) Spks165°F (74°C) for 175°F (79°C) and 200°F (93°C) Spks
- 6. Cover plate adjustment.
- Either  $\frac{1}{2}$ " (13mm) or  $\frac{5}{16}$ " (approximate adjustment)
- 7. Cover Plate Finish

#### Installation Wrench

Model RC1 Sprinkler Wrench


#### Installation Aid


A protective cap is included for use during installation.

**Note:** Paint or any other coatings applied over the factory finish will void all approvals and warranties. Sprinklers and cup/ cover plate assemblies are packaged separately.

Important: The F1FR Sprinkler with Model CCP cover plate is not an FM Approved combination.

Nominal Orifice	"K" Factor		<b>T</b> 1	Temp.		Rating	Max.			Sprinkler
	US	Metric	Thread Size	ize Model Sprink	Sprinkler	Cover	Ambient Temp	Bulb Color	Approvals	Identification Number(SIN)
½" (15mm)	5.62	81.0	1/2" NPT	F1FR	135°F/57°C	135°F/57°C	100°F/38°C	Orange	1, 2, 3	R3615
½" (15mm)	5.62	81.0	1/2" NPT	F1FR	155°F/68°C	135°F/57°C	100°F/38°C	Red	1, 2, 3	R3615
1⁄2" (15mm)	5.62	81.0	1/2" NPT	F1FR	175°F/79°C	165°F/74°C	100°F/38°C	Yellow	1, 2, 3	R3615
½" (15mm)	5.62	81.0	1/2" NPT	F1FR	200°F/93°C	165°F/74°C	100°F/38°C	Green	1, 2, 3	R3615

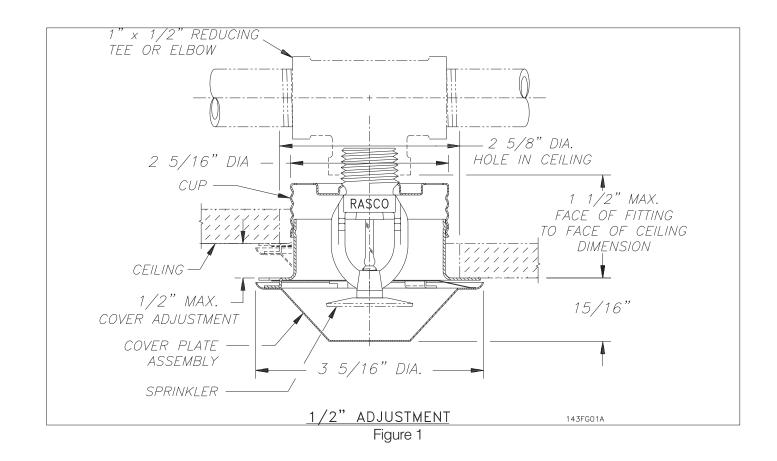

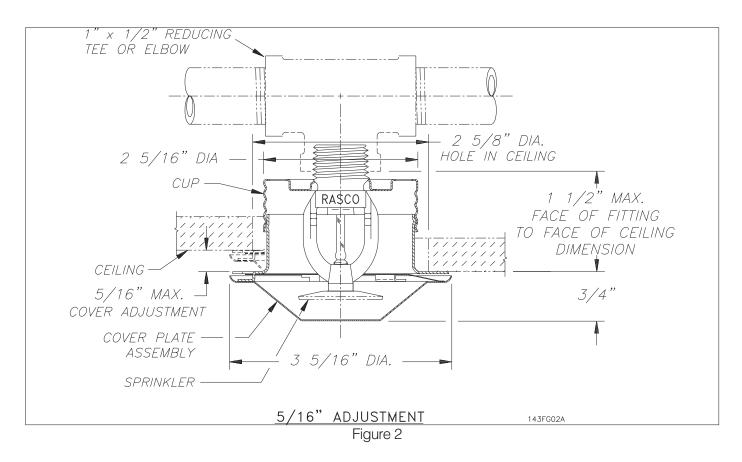

# **Reliable...For Complete Protection**

Reliable offers a wide selection of sprinkler components. Following are some of the many precision-made Reliable products that guard life and property from fire around the clock.

- Automatic sprinklers
- Flush automatic sprinklers
- Recessed automatic sprinklers
- Concealed automatic sprinklers
- Adjustable automatic sprinklers
- Dry automatic sprinklers
- Intermediate level sprinklers
- Open sprinklers
- Spray nozzles
- Alarm valves
- Retarding chambers
- Dry pipe valves
- Accelerators for dry pipe valves
- Mechanical sprinkler alarms
- Electrical sprinkler alarm switches
- Water flow detectors

- Deluge valves
- Detector check valves
- Check valves
- Supertrol electrical system
- Sprinkler emergency cabinets
- Sprinkler wrenches
- Sprinkler escutcheons and guards
- Inspectors test connections
- Sight drains
- Ball drips and drum drips
- Control valve seals
- Air maintenance devices
- Air compressors
- Pressure gauges
- Identification signs
- Fire department connection

The equipment presented in this bulletin is to be installed in accordance with the latest published Standards of the National Fire Protection Association, Factory Mutual Research Corporation, or other similar organizations and also with the provisions of governmental codes or ordinances whenever applicable. Products manufactured and distributed by Reliable have been protecting life and property for over 70 years, and are installed and serviced by the most highly qualified and reputable sprinkler contractors located throughout the United States, Canada and foreign countries.

Manufactured by



### The Reliable Automatic Sprinkler Co., Inc.

(800) 431-1588 (800) 848-6051 (914) 829-2042 www.reliablesprinkler.com Sales Offices Sales Fax Corporate Offices Internet Address



Revision lines indicate updated or new data.

E.G. Printed in U.S.A 12/00

P/N 9999970122